


PNEUMATIC TOOL PARTS LIST

■ BRAD NAILER
Model NT 50AE(S)

2005 • 06 • 29
(E1)

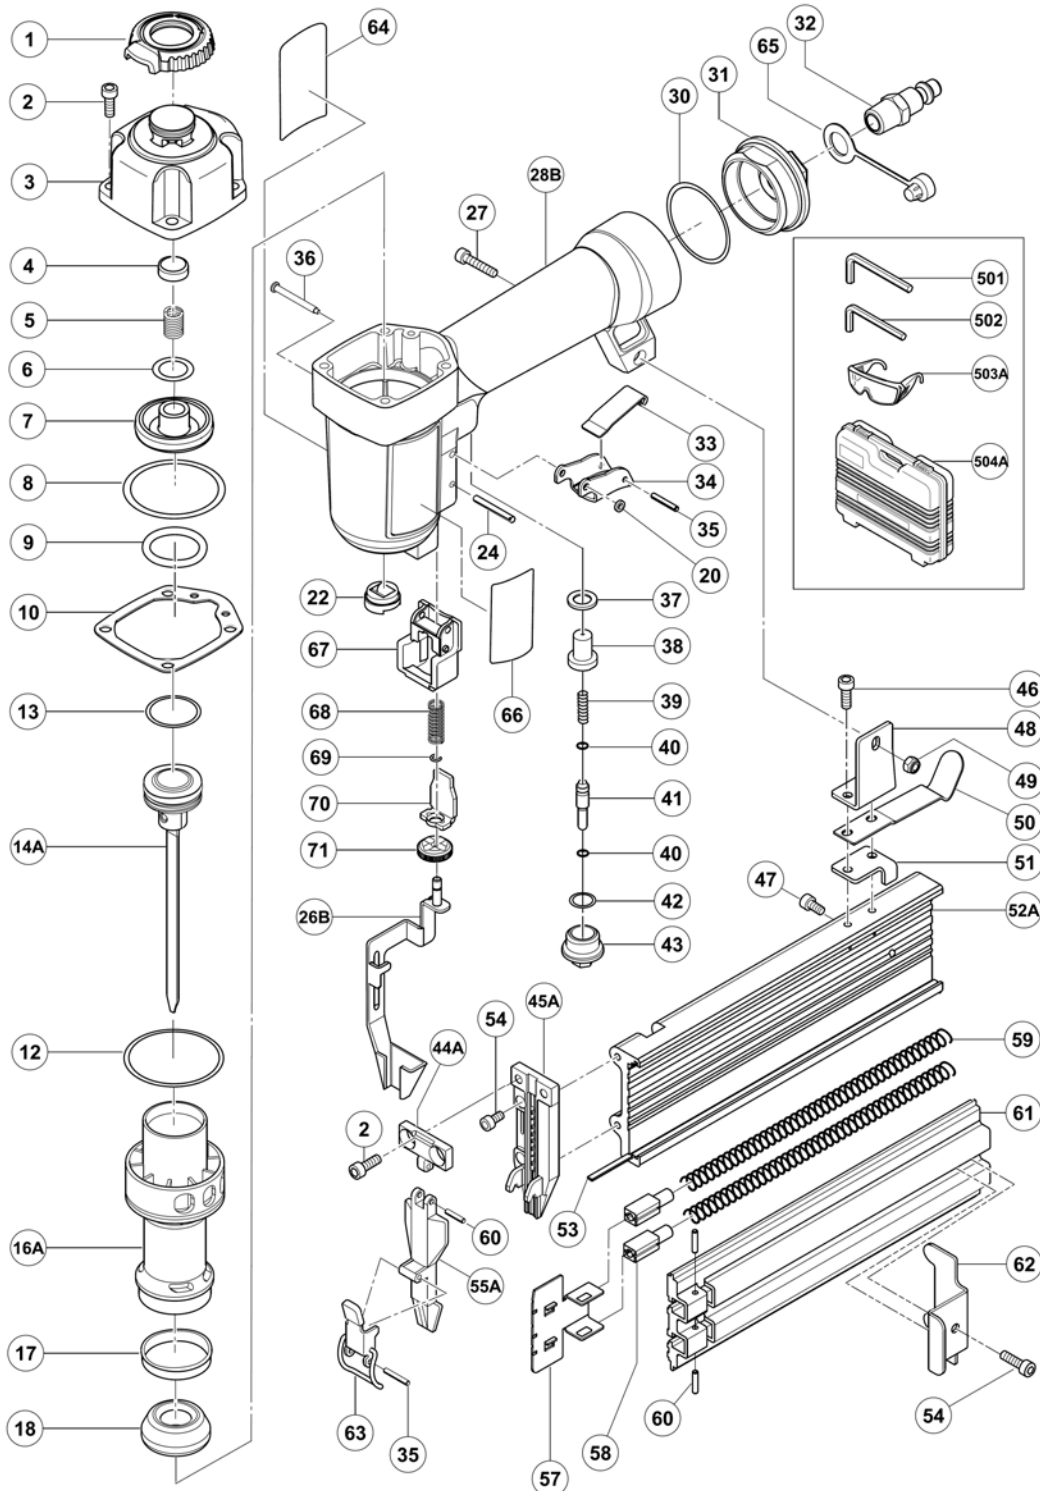

Parts List

NT50AE(S)

Item #	Code #	DESCRIPTION	NO USED	Remarks
1	882-270	Deflector	1	
2	882-271	Bolt M5 x 20	6	
3	882-272	Cap	1	
4	882-273	Seal	1	
5	882-274	Spring	1	
6	882-275	O-Ring (I.D. 13.8)	1	
7	882-276	Hd. Valve Piston	1	
8	882-277	O-Ring (I.D. 31.8)	1	
9	882-278	O-Ring (I.D. 23)	1	
10	882-279	Packing	1	
12	882-281	O-Ring (I.D. 43)	1	
13	882-282	O-Ring (I.D. 21.7)	1	
14A	882-340	Driver Unit	1	
16A	882-333	Cylinder	1	
17	882-286	Cylinder Ring	1	
18	882-287	Bumper	1	
20	882-296	Ring	1	
22	882-288	Joint Guide	1	
24	882-306	Spring Pin D3 x 25	1	
26B	882-341	Safety	1	
27	882-314	Hex. Socket Hd. Bolt M4 x 16	1	
28B	885-049	Body	1	
30	882-302	O-Ring (I.D. 37)	1	
31	882-303	End Cap	1	
32	882-304	Air Plug	1	
33	882-297	Safety	1	
34	882-298	Trigger	1	
35	882-299	Spring Pin D2.5 x 16	2	
36	882-300	Stepped Pin	1	
37	882-289	Seal	1	
38	882-290	Trigger Valve Head	1	
39	882-291	Spring	1	
40	882-293	O-Ring (I.D. 2.5)	2	
41	882-292	Trigger Valve Stem	1	
42	882-294	O-Ring (I.D. 13)	1	
43	882-295	Trigger Valve Guide	1	
44A	882-335	Driver Guide Cover (B)	1	
45A	882-336	Driver Guide	1	
46	882-315	Bolt M4 x 12	2	
47	882-328	Bolt M4 x 8	1	
48	882-317	Fixed Plate	1	
49	882-316	Lock Nut M4	1	
50	882-318	Stopper	1	
51	882-319	Stopper	1	
52A	882-342	Magazine Unit (A)	1	
53	882-321	Flat Bar	1	
54	882-311	Hex. Socket Hd. Bolt M4 x 14	4	
55A	882-337	Guide Plate (A)	1	
57	992-324	Pusher	1	
58	882-323	Shaft	2	

Parts List

NT50AE(S)

[illegible]

Parts are subject to change without any obligation on the part of the HITACHI due to improvements.